

 


MOTOROLA

START HERE >

Welcome

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola 120e wireless phone.

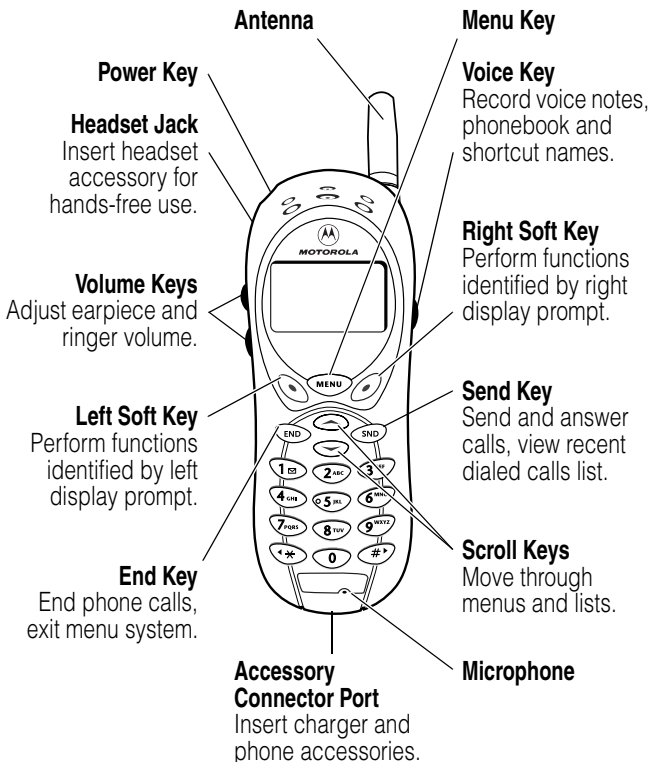

Personal Communications Sector
600 North U.S. Highway 45
Libertyville, Illinois 60048

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States)

1-800-461-4575 (Canada)

www.motorola.com (United States)

www.motorola.ca (Canada)

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. TrueSync, Sidekick, Starfish and the Stylized Starfish Logo are registered trademarks of Starfish Software, Inc., a wholly owned independent subsidiary of Motorola, Inc. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2002, 2003.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual number: 6809456A64-O

Cover number: 8988485L61-O

Contents

Safety and General Information	5
Getting Started	11
What's in the Box?	11
About This Guide	11
Installing the Battery	12
Charging the Battery	13
Battery Use	14
Turning Your Phone On	15
Adjusting Volume	16
Making a Call	16
Answering a Call	17
Viewing Your Phone Number	17
Learning to Use Your Phone	18
Using the Display	18
Using Menus	21
Entering Text	24
Locking and Unlocking Your Phone	32
Changing a Code or Password	34
If You Forget a Code or Password	34
Locking and Unlocking the Keypad	35
Setting Up Your Phone	36
Storing Your Name and Phone Number	36
Setting the Time and Date	36
Setting a Ring Style	36
Setting Answer Options	37
Zooming In and Out	37
Setting Display Contrast	38

Adjusting the Backlight	38
Hiding or Showing Location Information	38
Calling Features	40
Changing the Active Line	40
Redialing a Number	40
Using Automatic Redial	40
Using Caller ID	41
Canceling an Incoming Call	41
Turning Off a Call Alert	42
Calling an Emergency Number	42
Viewing Recent Calls	42
Returning an Unanswered Call	44
Using the Notepad	45
Attaching a Number	46
Calling With Speed Dial	46
Calling With One-Touch Dial	46
Using Voicemail	47
Muting the Phone	49
Using Call Waiting	49
Phone Features	50
Main Menu	50
Feature Quick Reference	51
Specific Absorption Rate Data	62
Additional Health and Safety Information	64
Warranty	72
Product Registration	77
Export Law Assurances	77
RF Energy Interference	77
Index	78
Wireless Phone Safety Tips	85

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION.
READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information in user guides published prior to December 1, 2002.

Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following procedures.

External Antenna Care

Use only the supplied or Motorola-approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorized antennas may result in non-compliance with the local regulatory requirements in your country.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline telephone.

Body-Worn Operation

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines. If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 1 inch (2.5 centimeters) from your body when transmitting.

Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 1 inch (2.5 centimeters) from your body.

Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries and antenna, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at www.Motorola.com.

RF Energy Interference/Compatibility

Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimeters) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 6 inches (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving best practices may be found in the “Wireless Phone Safety Tips” at the end of this manual and at the Motorola website:

www.Motorola.com/callsmart.

Operational Warnings

For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere, unless it is a phone type especially qualified for use in such areas and certified as “Intrinsically Safe.” Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.






Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted “Turn off electronic devices.” Obey all signs and instructions.

Batteries

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola original batteries and chargers.**

Your battery or phone may contain symbols, defined as follows:

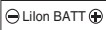Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to blinking lights, such as when watching television or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a blinking-lights feature on your phone. (The blinking-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate blinking lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a blinking-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

Repetitive Motion Injuries

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

Getting Started



What's in the Box?

Your digital wireless phone typically comes equipped with a battery and a charger. You can purchase other accessory items to customize your phone for maximum performance and portability.

To purchase Motorola Original™ accessories, contact the Motorola Customer Call Center at 1-800-331-6456 in the United States or 1-800-461-4575 in Canada.

About This Guide

This guide introduces you to your Motorola wireless phone.

Note: A *More Here* reference guide for your phone is also available that describes your phone's features in more detail.

To obtain the *More Here* guide for your phone, or another copy of this guide, see the Motorola Web site at:

<http://motorola.com/consumer/manuals> (U.S.A.)

<http://motorola.ca/consumer> (Canada)

or contact the Motorola Customer Call Center at 1-800-331-6456 in the United States or 1-800-461-4575 in Canada.

Optional Features



This label identifies an optional network or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

Optional Accessories



This label identifies a feature that requires an optional Motorola Original™ accessory.

Installing the Battery

 
You must install and charge the battery to use your phone.



Your phone is designed to be used only with Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.


Action

- 1 Remove the battery from its protective clear plastic case.
- 2 If necessary, slide down the battery door release latch and lift the door off of the phone.

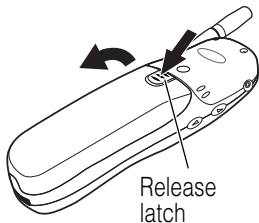

Action

 - 3 Insert the battery, printed arrows first, into the top of the battery compartment and push down.

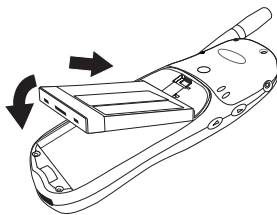


-
- 4 Replace the battery door.
-

Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

Action

 - 1 Plug the travel charger into your phone with the release tab facing up.

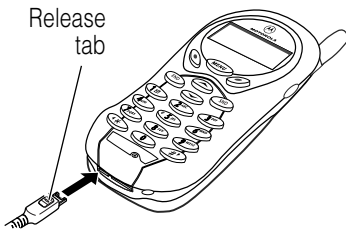

-
- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
 - 3 When your phone indicates that the battery is fully charged (**Charge Complete**), press the release tab and remove the travel charger.
-



Note: When you charge the battery, the battery level indicator in the upper right corner of the display shows how much of the charging process is complete. At least one segment of the battery level indicator must be visible to ensure full phone functionality while charging.

Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; items attached to the phone's accessory connector port; and your voice, data, and other application usage patterns.

Caution: To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximize your battery's performance:

- Always use Motorola Original™ batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for long periods of time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.


- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Over extended periods of time, batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



 
The rechargeable batteries that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods. Never dispose of batteries in a fire because they may explode.


Turning Your Phone On

Action

- 1 Press and hold  to turn on your phone

Power key

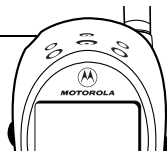

- 2 If necessary, enter your four-digit unlock code and press **OK** () to unlock the phone

 
The unlock code is originally set to 1234. Your service provider may change this number before you receive your phone.

Adjusting Volume





Press the up and down volume keys to:

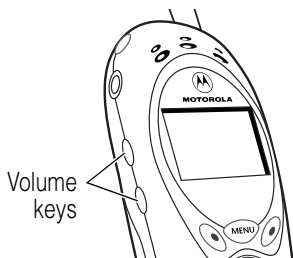- increase and decrease earpiece volume during a call
- increase and decrease the ringer volume setting when the idle display is visible



Making a Call

Press	To
1 keypad keys	dial the phone number
	Tip: If you make a mistake, press DELETE (⌫) to delete the last digit, or press and hold DELETE (⌫) to clear all digits.
2 	make the call
3 	end the call and “hang up” the phone when you are finished

Note: You must dial the phone number from the idle display. See page 18.

Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

Press	To
1 SND or ANSWER (⓪)	answer the call
2 END	end the call and “hang up” the phone when you are finished

Note: If the phone is locked, you must unlock it to answer the call.

Viewing Your Phone Number

To view your phone number from the idle display, press

MENU **#***.

While you are on a call, press **MENU** > **My Tel. Number**.

 


Learning to Use Your Phone

See page 1 for a basic phone diagram.

Using the Display


The *idle display* (shown below) is the standard display you see when you are *not* on a call or using the menu. You must be in the idle display to dial a phone number.

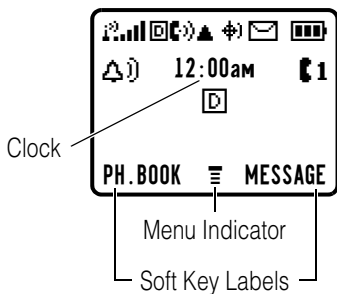


The ☰ (menu) indicator at the bottom center of the display indicates you can press the menu key (MENU) to go to the main menu to see more features.

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key (⏪) or right soft key (⏩) to perform the function indicated by the left or right soft key label.

 Status indicators are grouped at the top of the display:

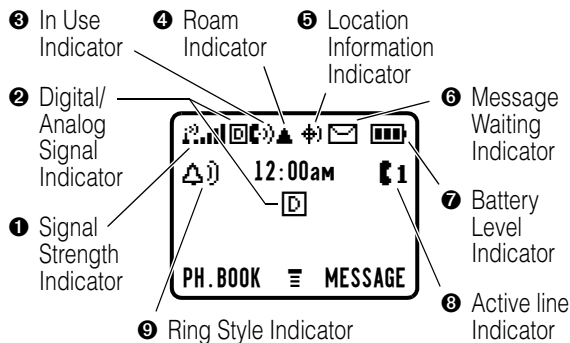

1 Signal Strength Indicator Vertical bars show the strength of the network connection. You cannot make or receive calls when the  (no signal) indicator is displayed.



2 Digital (D) or Analog (A) Signal Indicator Shows whether you are receiving a digital or analog signal.

3 In Use Indicator Shows that a call is in progress.



4 Roam Indicator Shows that your phone is seeking or using another network system outside your home network.




5 Location Information Indicator Shows whether *Automatic Location Information (ALI)* about your phone is turned on or off:

 = ALI on

 = ALI off





 
⑥ **Message Waiting Indicator** Appears when you receive a text message. When you receive a voicemail message, your phone displays the  (voice message waiting) indicator.


⑦ **Battery Level Indicator** Vertical bars show the battery charge level. Recharge the battery when you see **Low Battery** and hear the low battery alert.



⑧ **Active Line Indicator** Shows the current active phone line.


⑨ **Ring Style Indicator** Shows the ring style setting.

 = loud ring

 = soft ring


 = vibrate

  = vibrate and ring

 = silent

Using Menus

 From the idle display, press **MENU** to go to the main menu.

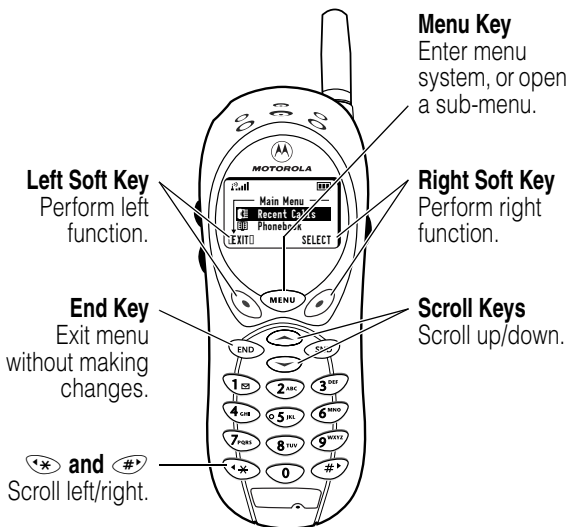

Selecting a Menu Feature

This guide shows you how to select a menu feature as follows, starting from the idle display:

Find the Feature **MENU** > Messages > Quick Notes

 
This example shows that from the idle display, you must press **MENU**, scroll to and select **Messages** from the main menu, then scroll to and select **Quick Notes**. Use **Left/Right Arrow Keys** to




scroll, and the left/right soft keys to select the functions listed in the bottom left and right corners of the display.

Selecting a Feature Option

 
Some features require you to select an item from a list:

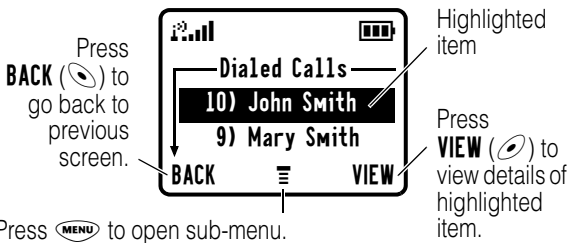
 


- Press  to scroll up or down to highlight the item you want.
- In a numbered list, press a number key to highlight the item.
- In an alphabetized list, press a key multiple times to cycle through the letters on the key and highlight the closest matching list item.




Entering Feature Information

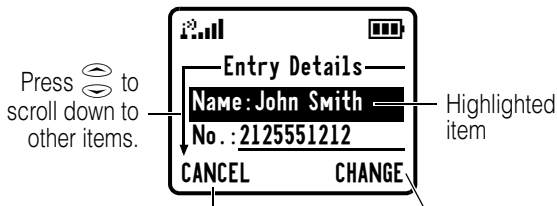Some features require you to enter information:



 
Press **CANCEL** () to exit without making changes. **DONE** () appears when you enter or edit information.

Press **CHANGE** () to enter or edit information.


- Enter numbers or text with the keypad.
- When an item has a list of possible values, press  or  to scroll through and select a value.
- When an item has a list of possible numeric values, press a number key to set the value.
- If you enter or edit information and do not want to save your changes, press  to exit without saving.



The message center lets you compose and send text messages. A *flashing cursor* shows where text will appear:

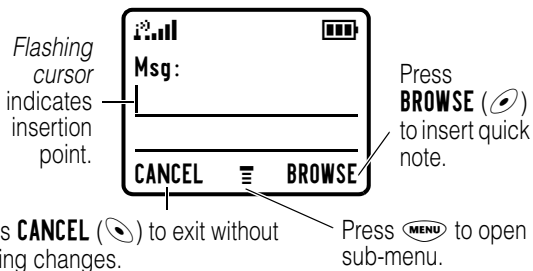

When you enter text using the standard tap method (see page 25), the flashing cursor changes to a *block cursor*, and the soft key functions change:

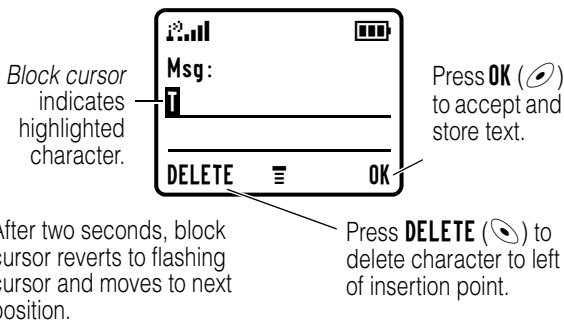

Entering Text

Multiple text entry methods make it easy for you to enter names, numbers, and messages on your phone.

Choosing a Text Mode


Most text entry screens let you enter letters, numbers, and/or symbols as required. Press  from a text entry screen to select a text mode:

- iTAP** Let the phone predict each word as you enter it. See page 28.
- Tap Method** Enter letters, numbers, and symbols by pressing a key one or more times. See following section.
- Numeric** Enter numbers only.
- Symbol** Enter symbols only. See page 31.
- Browse** Browse your phonebook or recent call lists to select a name or number.

Note: The text mode you select remains active until you change it by selecting another mode.

Using Tap Method

This is the standard mode for entering text on your phone.

Press  from any text entry screen and select the **Tap Method** menu option.

Press	To
1 A number key one or more times	select a letter, number, or symbol shown in the “Character Chart” on page 27




Press	To
2 Number keys	enter the remaining characters
3 OK (⓪)	store the text when you are finished

General Text Entry Rules

Press a number key repeatedly to cycle through its characters. See the “Character Chart” on page 27.

Press a number key as many times as necessary to enter desired character at flashing cursor location.

 
Press and hold a number key to cycle between text and numeric entry modes.

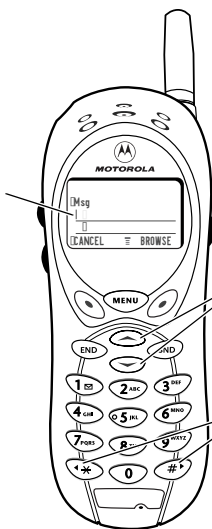


Change letter in block cursor to uppercase or lowercase.

Move flashing cursor to left or right in text message.









 

- If you do not press a key for two seconds, the character in the block cursor is accepted, and the cursor moves to the next position.

- The first character of every sentence is capitalized. (Press  down to force the character to lowercase while it is highlighted by the block cursor).
- Your phone may support multiple languages. The current language setting determines whether a new message begins on the left or right side of the display.

You can switch languages within a message. Press  to select the text mode and language you want to use.

Character Chart

Use this chart as a guide for entering characters with the tap method.


	space . 1 ? ! , @ _ & ~ : ; " - () ' ` ı % £ \$ ¥ ¤ €
	a b c 2 ä å á à â ã α β ç
	d e f 3 δ ë é è ê ε φ
	g h i 4 ï í î γ η ι
	j k l 5 κ λ
	m n o 6 ñ ö ø ó ò ô õ μ υ ω
	p q r s 7 π β σ
	t u v 8 θ ü ú ù û τ
	w x y z 9 ξ ψ
	+ - 0 x * / \ [] = > < # §

Note: This chart may not reflect the exact character set available on your phone.



Using iTAP™ Software Predictive Text Entry Method

iTAP™ software is a predictive text entry method that lets you enter a word using a single keypress per letter.

Press  from any text entry screen and select the iTAP menu option.

Entering Words



Action


- 1 Press a number key one time to enter the first letter of the word

The letters associated with the key are shown at the bottom of the display.

- 2 Press number keys (one per letter) to enter the rest of the word




Alternative words and letter combinations are shown at the bottom of the display. The word choices are updated with each keypress.

 
- 3 Press  or  to highlight the word you want

- 4 Press **SELECT** () to enter the word at the flashing cursor location

A space is automatically inserted after the word.



For example, to spell the word “art,” press    .
The display shows:

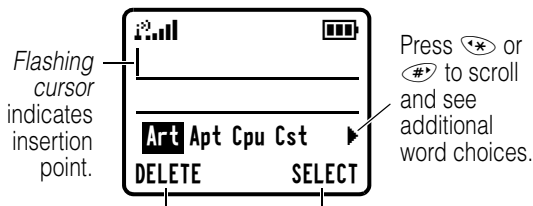






Press **DELETE** () to clear last letter.

Press **SELECT** () to insert highlighted word.

Entering Novel Words



You may enter a word that the iTAP software does not recognize. If the word you want is not displayed:

Action

- 1 Press **DELETE** () one or more times to delete letters until you see a letter combination that matches the start of the word
- 2 Press  or  to highlight the letter or letter combination
- 3 Press **SELECT** () , then press  to shift the text entry cursor to the left and “lock” the selected word portion
- 4 Continue to enter letters and highlight letter combinations to spell the word





Entering Punctuation


Press	To
 or 	enter punctuation or other characters as shown in the “Character Chart” on page 27

Using Capitalization

The first word of a sentence is automatically capitalized, with following words in lowercase.

Press	To
 	change the words to initial character capitalized, all uppercase characters, or all lowercase characters

Entering Numbers

Action
1 Enter the first digit and then highlight it to put the iTAP software in number entry mode
2 Press number keys to add digits to the number
3 Press SELECT () to enter the number at the flashing cursor location

Deleting Letters and Words

Place the cursor to the right of the text you want to delete, and then do the following:

Action

Press **DELETE** (↵) to delete one letter at a time

Hold **DELETE** (↵) to delete the entire message

Using Symbol Mode

Your phone provides an alternate way to enter symbol characters in a message. Press **MENU** from any text entry screen and select the **Symbol** menu option.











Do This

- 1 Press a number key one time to display its symbol options at the bottom of the display
See the “Symbol Chart” on page 32.
- 2 Press **←*** or **#→**, or press the number key multiple times, to highlight the symbol you want
- 3 Press **SELECT** (⏎) to enter the symbol at the flashing cursor location



Symbol Chart

Use this chart as a guide for entering characters in symbol mode.

1 	space . ? ! , @ _ & ~ : ; " - () ' ` ¡ ¨ % £ \$ ¥ ¤ €
2 	@ _ \
3 	/ : ;
4 	" & '
5 	() [] { }
6 	¡ ¨ ~
7 	< > =
8 	\$ £ ¥ ¤ €
9 	# % *
0 	+ - x * / = > < # §

Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.


To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, **but you must unlock it to answer.**

You can make emergency calls on your phone even when it is locked. For more information, see page 42.

Locking Your Phone Manually

Find the Feature


 > Settings > Security
> Phone Lock
> Lock Now

Press	To
1 keypad keys	enter your unlock code
2 OK ()	lock the phone

Unlocking Your Phone

Tip: Your phone's unlock code is originally set to 1234 at the factory. Many service providers reset the unlock code to the last four digits of your phone number.

At the **Enter Unlock Code** prompt:


Press	To
1 keypad keys	enter your unlock code
2 OK ()	unlock your phone

Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off.

Find the Feature

 > Settings > Security
> Phone Lock
> Automatic Lock > On

Press	To
1 keypad keys	enter your unlock code
2 OK ()	activate automatic lock



Changing a Code or Password

Your phone's four-digit unlock code is originally set to 1234, and the six-digit security code is originally set to 000000 at the factory. Your service provider may reset these numbers before you receive your phone.

If your service provider has *not* reset these numbers, we recommend that you change them to prevent other users from accessing your personal information. The unlock code must contain four digits, and the security code must contain six digits.

To change a code or password:



Find the Feature

 > Settings > Security
> New Passwords

If You Forget a Code or Password



If you forget your security code, contact your service provider.

If you forget your unlock code, try entering 1234 or the last four digits of your phone number. If that does not work, do the following at the **Enter UnLock Code** prompt:

Press	To
1 	go to the unlock code bypass screen
2 keypad keys	enter your security code
3 OK ()	submit your security code

Locking and Unlocking the Keypad

You can lock your phone keypad to prevent accidental keypresses (for example, when carrying your phone in a purse or pocket).

Press	To
 	lock or unlock your keypad

Note: Incoming calls and messages unlock the keypad.



Setting Up Your Phone

Storing Your Name and Phone Number



To store or edit user name and phone number information on your phone:

Find the Feature

-  > Settings
- > Phone Status
- > My Tel. Number

Setting the Time and Date

You must set the time and date to use the datebook.


Find the Feature


-  > Settings
- > Other Settings
- > Initial Setup
- > Time and Date


Setting a Ring Style

Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*.

 
You can select one of five different ring styles:

 = loud ring

 = soft ring

 = vibrate

 = vibrate and ring



 = silent


The ring style indicator in the display shows the current ring style (see page 19).

To set a ring style:

Find the Feature

 > **Settings**
> **Ring Styles** > **Style**

	Press	To
1		scroll to the ring style
2	SELECT 	select the ring style

Each ring style contains settings for specific event alerts, ringer ID, and ringer and keypad volume. To change these settings, press  > **Settings** > **Ring Styles** > **Style Detail**.

Setting Answer Options

You can use different methods to answer an incoming call.



Find the Feature

 > **Settings**
> **In-Call Setup**
> **Answer Options**

The **Answer Options** menu includes:

Multi-Key answer by pressing any key

Zooming In and Out

Press and release , then press and hold  to zoom in and out on the display. Zoom in to increase text size, zoom out to display more information.



You can also zoom in and out from the menu:

Find the Feature

-  > Settings
- > Other Settings
- > Initial Setup > Zoom

Setting Display Contrast

Find the Feature

-  > Settings
- > Other Settings
- > Initial Setup
- > Contrast

Adjusting the Backlight

You can set the amount of time that the display backlight remains on, or turn off the backlight to extend battery life.


Find the Feature

-  > Settings
- > Other Settings
- > Initial Setup
- > Backlight

Hiding or Showing Location Information



You can activate the *Automatic Location Information* (ALI) feature to tell the network where you are physically located.




When ALI is set to **Location On**, your phone displays the  (ALI on) indicator. Services may use your known location to provide useful information (for example, driving directions, or the location of the nearest bank).


Your phone prompts you when the network or a service asks for your location. You can refuse at this point.

When ALI is set to **911 Only**, your phone displays the \clubsuit (ALI off) indicator, and the phone does not send location information unless you call the emergency phone number (such as 911).

Find the Feature

 > **Settings** > **Location**

	Press	To
1	 	scroll to Location On or 911 Only
2	SELECT 	select the setting

To view or change the location transmission status of your phone during a call, press  > **Location**.



Calling Features

For basic instructions on how to make and answer calls, see page 16.

Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.



Find the Feature

-  > Settings
- > Phone Status
- > Active Line

The active line indicator in the display shows the current active phone line. See page 19.

Redialing a Number

If you hear an ordinary busy signal:

Press	To
1 	hang up
2 	redial the busy number

Using Automatic Redial

If the network is busy, you hear a fast busy signal, and your phone displays **Call Failed**.





With automatic redial, your phone automatically redials the number for four minutes. When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and then connects the call.

You must turn on automatic redial to use the feature. To turn automatic redial on or off:

Find the Feature

-  > Settings
- > Other Settings
- > Initial Setup
- > Auto Redial

When automatic redial is turned off, you can manually activate the feature to redial a phone number. When you hear a fast busy signal and see **Call Failed**:

Press	To
 or RETRY 	activate automatic redial

Using Caller ID





Calling line identification (caller ID) displays the phone number for incoming calls.

The phone displays the caller's name when the name is stored in your phonebook, or

Incoming Call when caller ID information is not available.

Canceling an Incoming Call

While the phone is ringing or vibrating:

Press	To
 or IGNORE 	cancel the incoming call





Depending on your phone settings and/or service subscription, the call may be forwarded to another number, or the caller may hear a busy signal.

Turning Off a Call Alert


You can turn off your phone's incoming call alert before answering the call.

Press	To
either volume key	turn off the alert

Calling an Emergency Number

Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Press	To
1 keypad keys	dial the emergency number
2 	call the emergency number







Viewing Recent Calls

Your phone keeps a list of the calls you recently received and dialed, even if the calls did not connect. The lists are

sorted from newest to oldest entries. The oldest entries are deleted as new ones are added.

Shortcut: Press **SND** to go directly to the dialed calls list from the idle display.

Find the Feature **MENU** > **Recent Calls**

Press	To
1  	scroll to Received Calls or Dialed Calls
2 SELECT ()	select the list
3  	scroll to an entry Note: ✓ means the call connected.
4 SND	call the entry's number Tip: Press and hold SND for two seconds to send the number as DTMF tones during a call.
or VIEW ()	view entry details
or MENU	open the Last Calls Menu to perform other procedures





The **Last Calls Menu** can include the following options:



Option	Description
Store	Create a phonebook entry with the number in the No. field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Send Message	Open a new text message with the number in the To field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent call lists, after the highlighted number.
Send Tones	Send the number to the network as DTMF tones. Note: This option appears only during a call.

Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

- the  (missed call) indicator
- **X Missed Calls**, where **X** is the number of missed calls

Press	To
1 VIEW 	see the received calls list




Press	To
2 	select a call to return
3 	make the call

Using the Notepad

Your phone stores the most recent string of digits entered on the keypad in a temporary memory location called the *notepad*. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

Find the Feature


 > Recent Calls
> Notepad

Press	To
	call the number
or	
	open the Dialing Menu to attach a number or insert a special character
or	
STORE 	create a phonebook entry with the number in the No. field





Attaching a Number

While dialing (with digits visible in the display):

Press	To
 > Attach Number	attach a number from the phonebook or recent call lists

Calling With Speed Dial

Each entry you store in your phonebook is assigned a unique *speed dial* number. To speed dial a phonebook entry:

Press	To
1 keypad keys	enter the speed dial number for the entry you want to call
2 	submit the number
	Note: Some networks let you skip this step for speed dial numbers 1 through 99.
3 	call the entry



Calling With One-Touch Dial

To call phonebook entries 1 through 9, just press and hold the one-digit speed dial number for one second.

We recommend that you reserve phonebook entry 1 (speed dial number 1) for storing and dialing your



voicemail phone number. Usually, your service provider has already done this for you. If necessary, see your reference guide for information on how to store your voicemail number as a phonebook entry.

Using Voicemail




Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.

Note: Your service provider may include additional information about using this feature.


Listening to Voicemail Messages

Find the Feature  > Messages > VoiceMail


The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store one.

Shortcut: Your service provider may also store your voicemail phone number as phonebook entry number 1. If so, you can press and hold  to listen to your voicemail message(s).

Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the  (voicemail message) indicator and a **New VoiceMail** notification.

Press

CALL 

To

listen to the message



The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store one.

Storing Your Voicemail Phone Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

Find the Feature

 > Messages
 > VoiceMail Setup

	Press	To
1	keypad keys	enter your voicemail number
2	OK (ⓘ)	store the number

Your service provider additionally may store your voicemail phone number as phonebook entry number 1, so you can use one-touch dial to listen to your voicemail messages. If necessary, see your reference guide for information on how to store your voicemail number as a phonebook entry.

Turning Off the Voicemail Message Indicator

To clear the  (voicemail message) indicator:

Find the Feature

 > Messages
 > Clear Count



Muting the Phone

To mute your phone during a call, press **MUTE** (📞) (if available) or **MENU** > **Mute**.

Using Call Waiting



When you are on a call, an alert tone sounds to indicate that you have received a second call.

	Press	To
1	SND	answer the new call
2	SND	switch back to the first call



Phone Features

Main Menu

This is the standard main menu layout. **Menu organization and feature names may vary on your phone.** Not all features may be available for all users.

For example, the **Radio** feature is available only when the optional FM Stereo Radio Headset accessory is plugged into your phone (see phone illustration, page 1).

Recent Calls
Received Calls
Dialed Calls
Notepad
Call Times

Phonebook

Datebook

Radio

Messages

Vicemail
Text Msgs
Browser Alerts
Quick Notes
Outbox
Drafts

Shortcuts

Voice Notes

Browser

Calculator

Games

Settings

(see next page)

Shortcuts

Change display zoom:

Press **MENU**, then
press and hold **MENU**

Lock/unlock keypad:

Press **MENU** ****** (in idle)

Display my phone number:

Press **MENU** **#*** (in idle)

Dial voicemail number:

Press and hold **1** (in idle)

Go to dialed calls list:

 
Press **SND** (in idle)

Exit menu system:

Press **END**



Settings Menu

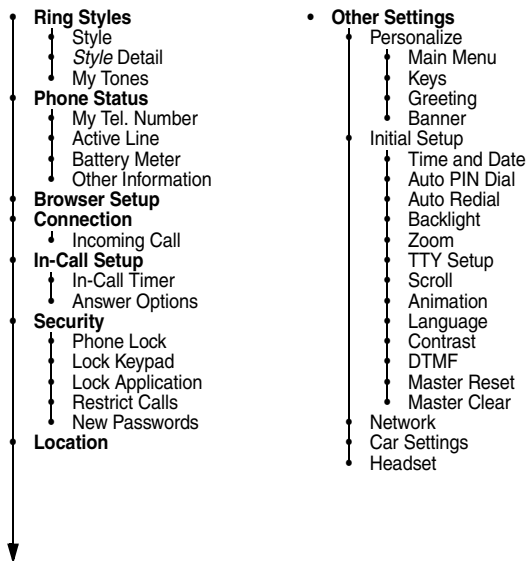

Feature Quick Reference

You can do more with your phone than make and receive phone calls! For example, you can store frequently called numbers in the phonebook for easy dialing, organize your meetings and other events in the datebook, browse the Web, download applications, send messages, and more.



Use this chapter to locate features on your phone that are not described in this guide. For more detailed information, see the *More Here* guide.

Calling Features



Feature	Description
Three-Way Call	During a call: Dial third party's number, press SND to call, press SND again to connect
Restrict Calls	Restrict outgoing or incoming calls: MENU > Settings > Security > Restrict Calls
TTY Calls	Set up your phone for use with an optional TTY device: MENU > Settings > Other Settings > Initial Setup > TTY Setup



Messages

Feature	Description
Send Message	Send a text message: MENU > Messages MENU > Create Message



Feature	Description	
Receive Message	Read a new text message that you have received: Press READ (⓪)	
Download Ring Tones	Highlight a ring tone in a message, then: MENU > Store	

Phonebook

Feature	Description
Create Entry	Create a new phonebook entry: MENU > Phonebook MENU > New > Phone Number or Email Address
Dial Number	Call a number stored in the phonebook: MENU > Phonebook > <i>entry to call</i>
Voice Dial Number	Voice dial a number stored in the phonebook: Press and release the voice key, and say the entry's name (in two seconds)



Personalizing Features

Feature	Description
Ring Alert	Change the ring alert for an event: MENU > Settings > Ring Styles > Style Detail > <i>event name</i>
Ring Volume	Set ringer volume: MENU > Settings > Ring Styles > Style Detail > Ring Volume
Keypad Volume	Set keypad keypress volume: MENU > Settings > Ring Styles > Style Detail > Key Volume
Soft Keys	Change soft key labels in the idle display: MENU > Settings > Other Settings > Personalize > Keys
Shortcuts	Create a shortcut to a menu item: Highlight the menu item, then press and hold MENU Select a shortcut: MENU > Shortcuts > <i>shortcut name</i>






Menu Features

Feature	Description
Language	Set menu language: MENU > Settings > Other Settings > Initial Setup > Language
Master Reset	Reset all options <i>except</i> unlock code, security code, lifetime timer: MENU > Settings > Other Settings > Initial Setup > Master Reset
Master Clear	Reset all options <i>except</i> unlock code, security code, lifetime timer, clear all user settings and entries: MENU > Settings > Other Settings > Initial Setup > Master Clear




Dialing Features

Feature	Description
Auto PIN Dial	Automatically dial an authenticating PIN code for outgoing calls:  > Settings > Initial Setup > Auto PIN Dial
DTMF Tones	Activate DTMF tones:  > Settings > Other Settings > Initial Setup > DTMF Send DTMF tones during a call: Press number keys Send stored numbers as DTMF tones during a call: Highlight a number in the phonebook or recent call lists, then press  > Send Tones







Call Monitoring

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service








provider. For billing information, please contact your service provider directly.







Feature	Description
Call Times	View call timers:  > Recent Calls > Call Times 
In-Call Timer	Display time or cost information during a call:  > Settings > In-Call Setup > In-Call Timer 

Handsfree Features

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.



Feature	Description
Speakerphone	Activate a connected external speakerphone during a call: Press SPEAKER  (if available) or  > Spkrphone On 
Auto Answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset:  > Settings > Other Settings > Car Settings or Headset > Auto Answer 




Feature	Description
Auto Hands-Free (car kit)	Automatically route calls to a car kit when connected:  > Settings > Other Settings > Car Settings > Auto Handsfree 
Power-Off Delay (car kit)	Set the phone to stay on for a period of time after the ignition is switched off:  > Settings > Other Settings > Car Settings > Power-Off Delay 
Charger Time (car kit)	Charge the phone for a period of time after the ignition is switched off:  > Settings > Other Settings > Car Settings > Charger Time 



Data and Fax Calls

Feature	Description
Send Data or Fax	Connect your phone to the device, then place the call through the device application 
Receive Data or Fax	Connect your phone to the device, then: MENU > Settings > Connection > Incoming Call > Next Call > Data In Only or Fax In Only Reset normal voice operation: MENU > Settings > Connection > Incoming Call > Next Call > Normal 

Network Features

Feature	Description
Network Settings	View network information and adjust network settings: MENU > Settings > Other Settings > Network 




Personal Organizer Features







Feature	Description
Add Datebook Event	Add an event to the datebook: MENU > Datebook > <i>day</i> MENU > New
View Datebook Event	View or edit event details: MENU > Datebook > <i>day</i> > <i>event name</i>
Event Reminder	View event reminder: VIEW (⊙) Dismiss event reminder: EXIT (⊙)
Record Voice Note	Record a voice note: Press and hold voice key, speak voice note, release voice key Note: Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.
Play Voice Note	Play back a recorded voice note: MENU > Voice Notes > <i>voice note</i>
Calculator	Calculate numbers: MENU > Calculator
Currency Converter	Convert currency: MENU > Calculator MENU > Exchange Rate Enter exchange rate, press OK (⊙), enter amount, select \$ function



Security

Feature	Description
Lock Application	Lock phone applications:  > Settings > Security > Lock Application

News and Entertainment

Feature	Description
Launch Micro-Browser	Start a micro-browser session:  > Browser 
Play a Game	Play a game on your phone:  > Games
My Tones	Compose your own ring tones, manage ring tones that you have composed or downloaded:  > Settings > Ring Styles > My Tones
Radio	Use the optional Motorola Original™ FM Stereo Radio Headset accessory:  > Radio 



Specific Absorption Rate Data

The model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by Health Canada for Canada. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by Health Canada is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 1.59 W/kg, and when worn on the body, as described in this user guide, is 0.69 W/kg. (Body-worn measurements

differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

**The U.S. Food and Drug
Administration's Center for
Devices and Radiological Health
Consumer Update on Mobile Phones**



FDA has been receiving inquiries about the safety of mobile phones, including cellular phones and PCS phones. The following summarizes what is known—and what remains unknown—about whether these products can pose a hazard to health, and what can be done to minimize any potential risk. This information may be used to respond to questions.

Why the concern?

Mobile phones emit low levels of radio frequency energy (i.e., radio frequency radiation) in the microwave range while being used. They also emit very low levels of radio frequency energy (RF), considered non-significant, when in the stand-by mode. It is well known that high levels of RF can produce biological damage through heating effects (this is how your microwave oven is able to cook food). However, it is not known whether, to what extent, or through what mechanism, lower levels of RF might cause adverse health effects as well. Although some research has been done to address these questions, no clear picture of the biological effects of this type of radiation has emerged to date. Thus, the available science does not allow us to conclude that mobile phones are absolutely safe, or that they are unsafe. However, the available scientific evidence does not demonstrate any adverse health effects associated with the use of mobile phones.

What kinds of phones are in question?

Questions have been raised about hand-held mobile phones, the kind that have a built-in antenna that is positioned close to the user's head during normal telephone conversation. These types of mobile phones are of concern because of the short distance between the phone's antenna—

the primary source of the RF—and the person's head. The exposure to RF from mobile phones in which the antenna is located at greater distances from the user (on the outside of a car, for example) is drastically lower than that from hand-held phones, because a person's RF exposure decreases rapidly with distance from the source. The safety of so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house and which operate at far lower power levels and frequencies, has not been questioned.

How much evidence is there that hand-held mobile phones might be harmful?

Briefly, there is not enough evidence to know for sure, either way; however, research efforts are on-going. The existing scientific evidence is conflicting and many of the studies that have been done to date have suffered from flaws in their research methods. Animal experiments investigating the effects of RF exposures characteristic of mobile phones have yielded conflicting results. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. In one study, mice genetically altered to be predisposed to developing one type of cancer developed more than twice as many such cancers when they were exposed to RF energy compared to controls. There is much uncertainty among scientists about whether results obtained from animal studies apply to the use of mobile phones. First, it is uncertain how to apply the results obtained in rats and mice to humans. Second, many of the studies that showed increased tumor development used animals that had already been treated with cancer-causing chemicals, and other studies exposed the animals to the RF virtually continuously—up to 22 hours per day.

For the past five years in the United States, the mobile phone industry has supported research into the safety of mobile phones. This research has resulted in two findings in particular that merit additional study:

- 1 In a hospital-based, case-control study, researchers looked for an association between mobile phone use and either glioma (a type of brain cancer) or acoustic neuroma (a benign tumor of the nerve

sheath). No statistically significant association was found between mobile phone use and acoustic neuroma. There was also no association between mobile phone use and gliomas when all types of types of gliomas were considered together. It should be noted that the average length of mobile phone exposure in this study was less than three years.

When 20 types of glioma were considered separately, however, an association was found between mobile phone use and one rare type of glioma, neuroepitheliomatous tumors. It is possible with multiple comparisons of the same sample that this association occurred by chance. Moreover, the risk did not increase with how often the mobile phone was used, or the length of the calls. In fact, the risk actually decreased with cumulative hours of mobile phone use. Most cancer causing agents increase risk with increased exposure. An ongoing study of brain cancers by the National Cancer Institute is expected to bear on the accuracy and repeatability of these results.¹

- 2 Researchers conducted a large battery of laboratory tests to assess the effects of exposure to mobile phone RF on genetic material. These included tests for several kinds of abnormalities, including mutations, chromosomal aberrations, DNA strand breaks, and structural changes in the genetic material of blood cells called lymphocytes. None of the tests showed any effect of the RF except for the micronucleus assay, which detects structural effects on the genetic material. The cells in this assay showed changes after exposure to simulated cell phone radiation, but only after 24 hours of exposure. It is possible that exposing the test cells to radiation for this long resulted in heating. Since this assay is known to be sensitive to heating, heat alone could have caused the abnormalities to occur. The data already in the literature on the response of the micronucleus assay to RF are conflicting. Thus, follow-up research is necessary.²

FDA is currently working with government, industry, and academic groups to ensure the proper follow-up to these industry-funded research findings. Collaboration with the Cellular Telecommunications Industry Association (CTIA) in particular is expected to lead to FDA providing research

recommendations and scientific oversight of new CTIA-funded research based on such recommendations.

Two other studies of interest have been reported recently in the literature:

- 1 Two groups of 18 people were exposed to simulated mobile phone signals under laboratory conditions while they performed cognitive function tests. There were no changes in the subjects' ability to recall words, numbers, or pictures, or in their spatial memory, but they were able to make choices more quickly in one visual test when they were exposed to simulated mobile phone signals. This was the only change noted among more than 20 variables compared.³
- 2 In a study of 209 brain tumor cases and 425 matched controls, there was no increased risk of brain tumors associated with mobile phone use. When tumors did exist in certain locations, however, they were more likely to be on the side of the head where the mobile phone was used.

Because this occurred in only a small number of cases, the increased likelihood was too small to be statistically significant.⁴

In summary, we do not have enough information at this point to assure the public that there are, or are not, any low incident health problems associated with use of mobile phones. FDA continues to work with all parties, including other federal agencies and industry, to assure that research is undertaken to provide the necessary answers to the outstanding questions about the safety of mobile phones.

What is known about cases of human cancer that have been reported in users of hand-held mobile phones?

Some people who have used mobile phones have been diagnosed with brain cancer. But it is important to understand that this type of cancer also occurs among people who have not used mobile phones. In fact, brain cancer occurs in the U.S. population at a rate of about 6 new cases per 100,000 people each year. At that rate, assuming 80 million users of

mobile phones (a number increasing at a rate of about 1 million per month), about 4800 cases of brain cancer would be expected each year among those 80 million people, whether or not they used their phones. Thus it is not possible to tell whether any individual's cancer arose because of the phone, or whether it would have happened anyway. A key question is whether the risk of getting a particular form of cancer is greater among people who use mobile phones than among the rest of the population. One way to answer that question is to compare the usage of mobile phones among people with brain cancer with the use of mobile phones among appropriately matched people without brain cancer. This is called a case-control study. The current case-control study of brain cancers by the National Cancer Institute, as well as the follow-up research to be sponsored by industry, will begin to generate this type of information.

What is FDA's role concerning the safety of mobile phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as mobile phones before marketing, as it does with new drugs or medical devices. However, the agency has authority to take action if mobile phones are shown to emit radiation at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of mobile phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions at this time, FDA has urged the mobile phone industry to take a number of steps to assure public safety. The agency has recommended that the industry:

- support needed research into possible biological effects of RF of the type emitted by mobile phones
- design mobile phones in a way that minimizes any RF exposure to the user that is not necessary for device function

- cooperate in providing mobile phone users with the best possible information on what is known about possible effects of mobile phone use on human health

At the same time, FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of mobile phone safety to ensure a coordinated effort at the federal level. These agencies are:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Health and Safety Administration
- National Telecommunications and Information Administration

The National Institutes of Health also participates in this group.

In the absence of conclusive information about any possible risk, what can concerned individuals do?

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if people are concerned about avoiding even potential risks, there are simple steps they can take to do so. For example, time is a key factor in how much exposure a person receives. Those persons who spend long periods of time on their hand-held mobile phones could consider holding lengthy conversations on conventional phones and reserving the hand-held models for shorter conversations or for situations when other types of phones are not available.

People who must conduct extended conversations in their cars every day could switch to a type of mobile phone that places more distance between their bodies and the source of the RF, since the exposure level drops off dramatically with distance. For example, they could switch to:

- a mobile phone in which the antenna is located outside the vehicle

- a hand-held phone with a built-in antenna connected to a different antenna mounted on the outside of the car or built into a separate package
- a headset with a remote antenna to a mobile phone carried at the waist

Again, the scientific data do not demonstrate that mobile phones are harmful. But if people are concerned about the radio frequency energy from these products, taking the simple precautions outlined above can reduce any possible risk.

Where can I find additional information?

For additional information, see the following Web sites:

Federal Communications Commission (FCC) RF Safety Program (select “Information on Human Exposure to RF Fields from Cellular and PCS Radio Transmitters”):

<http://www.fcc.gov/oet/rfsafety>

World Health Organization (WHO) International Commission on Non-Ionizing Radiation Protection (select Qs & As):

<http://www.who.int/emf>

United Kingdom, National Radiological Protection Board:

<http://www.nrpb.org.uk>

Cellular Telecommunications Industry Association (CTIA):

<http://www.wow-com.com>

U.S. Food and Drug Administration (FDA) Center for Devices and Radiological Health:

<http://www.fda.gov/cdrh/consumer/>

1. Muscat et al. Epidemiological Study of Cellular Telephone Use and Malignant Brain Tumors. In: State of the Science Symposium; 1999 June 20; Long Beach, California.
2. Tice et al. Tests of mobile phone signals for activity in genotoxicity and other laboratory assays. In: Annual Meeting of the Environmental Mutagen Society; March 29, 1999, Washington, D.C.; and personal communication, unpublished results.
3. Preece, AW, Iwi, G, Davies-Smith, A, Wesnes, K, Butler, S, Lim, E, and Varey, A. Effect of a 915-MHz simulated mobile phone signal on cognitive function in man. *Int. J. Radiat. Biol.*, April 8, 1999.
4. Hardell, L, Nasman, A, Pahlson, A, Hallquist, A and Mild, KH. Use of cellular telephones and the risk for brain tumors: a case-control study. *Int. J. Oncol.*, 15: 113-116, 1999.

Motorola Limited Warranty for the United States and Canada

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its telephones, pagers, messaging devices, and consumer and professional two-way radios (excluding commercial, government or industrial radios) that operate via Family Radio Service or General Mobile Radio Service, Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products and Accessories

Products Covered	Length of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.

Products Covered	Length of Coverage
Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Consumer and Professional Two-Way Radio Accessories.	Ninety (90) days from the date of purchase by the first consumer purchaser of the product.
Products and Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

Software

Products Covered	Length of Coverage
Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

Exclusions

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided “as is” and without warranty.

Who is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	Phones 1-800-331-6456 Pagers 1-800-548-9954 Two-Way Radios and Messaging Devices 1-800-353-2729
Canada	All Products 1-800-461-4575
TTY	1-888-390-6456
For Accessories and Software , please call the telephone number designated above for the product with which they are used.	

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF

THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

Product Registration

Online Product Registration:

<http://www.motorola.com/warranty>

Product registration is an important step toward enjoying your new Motorola phone. Registering helps us facilitate warranty service, and permits us to contact you should your phone require an update or other service. Registration is for U.S. residents only and is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

RF Energy Interference

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Index

A

- accessories 11, 12, 52
- accessory connector port 1
- active line indicator 19, 20
- alert
 - creating 61
 - defined 36
 - downloading 53
 - setting 54
 - turning off 42
- ALI indicators 19, 38
- analog signal indicator 19
- answering a call 17, 37
- antenna 1
- application, locking and
 - unlocking 61
- auto PIN dial 56
- automatic location
 - information
 - indicators 19
 - sending 38
- automatic redial 40

B

- backlight 38
- battery
 - car kit charger time 58
 - charging 13
 - extending battery life 14, 38
 - installing 12
 - level indicator 14, 19, 20
- block cursor 24, 26
- browse text mode 25

C

- calculator 60
- call
 - adding digits after phone number 44
 - alert, setting 54
 - alert, turning off 42
 - answer options 37
 - answering 17
 - call waiting 49
 - canceling 41
 - deleting 42
 - dialed calls list 42
 - dialing 16
 - emergency number 42
 - ending 16, 17
 - making 16
 - muting 49
 - received calls list 42
 - receiving 17
 - recent calls 42

- call (continued)
 - restricting 52
 - speakerphone 57
 - storing 42
 - three-way call 52
 - timers 57
 - unanswered call 44
- Call Failed** message 40
- call waiting 49
- caller ID 41, 44
- calling line identification.
 - See* caller ID
- car kit
 - automatic answer 57
 - automatic hands-free 58
 - charger time 58
 - power-off delay 58
- character chart 27
- clock
 - illustration 18
 - setting 36
- codes
 - changing 34
 - default 15, 33, 34
 - forgetting 34
- contrast, setting 38
- cursor 24, 26

D

- data call 59
- date, setting 36
- datebook 60

- deleting a call 42
- dialed calls list 42
- dialing a number 16
- digital signal indicator 19
- display
 - backlight 38
 - contrast 38
 - description 18
 - idle display, defined 18
 - language 55
 - zooming in/out 37
- DTMF tones
 - activating 56
 - sending 43, 44, 56

E

- earpiece volume 16
- emergency number 42
- end key 16, 17, 21
 - functions 1
- ending a call 16, 17
- Enter Unlock Code** message
 - 33, 34
- event alert 54

F

- fax call 59
- flashing cursor 24, 26
- FM Stereo Radio Headset
 - 61

G

games 61

H

hands-free use

- automatic answer 57
- automatic call routing 58
- charger time 58
- power-off delay 58
- speakerphone, activating 57

headset

- automatic answer 57
- FM Stereo Radio Headset 61

headset jack 1

I

idle display 18

in use indicator 19

Incoming Call message 41

incoming call, canceling 41

indicators

- active line 19, 20
- ALI 19, 38
- battery level 14, 19, 20
- digital/analog signal 19
- in use 19
- loud ring style 20, 36
- menu 18
- message waiting 19, 20

missed call 44

ring style 19

roam 19

signal strength 19

silent ring style 20, 36

soft ring style 20, 36

vibrate and ring style 20, 36

vibrate style 20, 36

voicemail message 20, 47, 48

iTAP software 28

K

key

end 1, 16, 17, 21

left soft key 1, 18, 21, 54

lock 35

menu 1, 21

power 1, 15

right soft key 1, 18, 21, 54

scroll 1, 21

send 1, 16, 17, 43

voice 1

volume control 1, 16

keypad

answering calls 37

locking and unlocking 35

volume, setting 54

L

language, setting 55
left soft key
 functions 1, 18, 21
 personalizing 54
location, sending to network
 38

lock

 application 61
 keypad 35
 phone 32

Low Battery message 20

M

making a call 16
master clear 55
master reset 55
menu
 entering text 23, 24
 language, setting 55
 lists 22
 navigating 21
 using features 22
menu indicator 18
menu key 1, 21
message
 receiving 53
 sending 52
message waiting indicator
 19, 20
micro-browser, using 61

microphone 1

missed call indicator 44

Missed Calls message 44

muting a call 49

my telephone number 17,
 36, 50

my tones 61

N

network settings 59

notepad 45

number

 storing your number 36

 viewing your number 17,
 50

numeric text mode 25

O

one-touch dial 46

optional accessory, defined
 12

optional feature, defined 12

P

passwords. *See* codes

phone

 active line indicator 20

 active line, changing 40

 alert, setting 54

 alert, turning off 42

 answer options 37

- phone (continued)
 - automatic location
 - information 38
 - clear stored information 55
 - codes 34
 - date, setting 36
 - keypad, answering calls 37
 - keypad, locking and
 - unlocking 35
 - language, setting 55
 - location 38
 - locking 32
 - network settings 59
 - reset all options 55
 - security code 34
 - time, setting 36
 - turning on/off 15
 - unlock code 34
 - unlocking 15, 32, 33, 34
- phone number
 - active line indicator 20
 - active line, changing 40
 - adding digits after 44
 - attaching two numbers 44, 46
 - redialing 40
 - storing in phonebook 53
 - storing your number 36
 - viewing your number 17, 50

- phonebook
 - attaching two numbers 44, 46
 - dialing a number 53
 - one-touch dial 46
 - speed dial number 46
 - storing an entry 53
 - voice dialing 53
- PIN code, dialing
 - automatically 56
- power key 1, 15
- predictive text entry 28

R

- radio 61
- received calls list 42
- recent calls 42
- redial
 - automatic redial 40
 - busy number 40
- reference guide 11
- restricting calls 52
- right soft key
 - functions 1, 18, 21
 - personalizing 54
- ring alert
 - setting 54
 - turning off 42
- ring style
 - personalizing 54
 - setting 36

- ring style indicators 19, 20, 36
- ring tone
 - creating 61
 - downloading 53
- ringer volume, setting 16, 54
- roam indicator 19

S

- scroll keys 1, 21
- security code
 - changing 34
 - default 34
 - forgetting 34
- send key 1, 16, 17, 43
- shortcuts 50, 54
- signal strength indicator 19
- silent ring alert, setting 36
- soft keys
 - functions 18, 21
 - illustration 1
 - labels 18
 - personalizing 54
- sound
 - downloading 53
- speakerphone, activating 57
- speed dial
 - number, defined 46
 - using 46
- standby time, increasing 38

- storing a call 42
- symbol chart 32
- symbol text entry 31

T

- tap method text entry 25
- telephone number
 - storing your number 36
 - viewing your number 17, 50
- text
 - block cursor 24, 26
 - browse mode 25
 - character chart 27
 - entering 24
 - entry mode, changing 25
 - flashing cursor 24, 26
 - iTAP software predictive text entry 28
 - numeric mode 25
 - symbol chart 32
 - symbol mode 31
 - tap method 25
- text mode, changing 25
- three-way call 52
- time, setting 36
- timers 57
- travel charger 13
- TTY device 52

U

- unlock
 - application 61
 - keypad 35
 - phone 32
- unlock code
 - bypassing 34
 - changing 34
 - default 15, 33, 34
 - entering 15, 33
 - forgetting 34

V

- vibrate alert
 - setting 54
 - turning off 42
- vibrate ring alert, setting 36
- voice dial 53
- voice key
 - dialing a number 53
 - functions 1
- voice notes 60
- voicemail 47
- voicemail message indicator
 - 20, 47, 48
- volume
 - earpiece 16
 - keypad 54
 - ringer 16, 54
- volume keys 1, 16

W

- warranty 72
- Web pages 61

Z

- zooming in/out 37



MOTOROLA

Wireless Phone Safety Tips

“Safety is your most important call!”

Your Motorola wireless telephone gives you the powerful ability to communicate by voice—almost anywhere, anytime, wherever wireless phone service is available and safe conditions allow. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. If you find it necessary to use your wireless phone while behind the wheel of a car, practice good common sense and remember the following tips:

- 1 Get to know your Motorola wireless phone and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.



- 2 **When available, use a hands-free device.** If possible, add an additional layer of convenience to your wireless phone with one of the many Motorola Original™ hands-free accessories available today.
- 3 **Position your wireless phone within easy reach.** Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- 4 **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- 5 **If you receive an incoming call at an inconvenient time do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- 6 **Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.** Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- 7 **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations which have the potential to divert your attention away from the road.



- 8 **Use your wireless phone to call for help.** Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.*
- 9 **Use your wireless phone to help others in emergencies.** If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.*
- 10 **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.*

* Wherever wireless phone service is available.

Check the laws and regulations on the use of wireless telephones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.



For more information,
please call
1-888-901-SAFE
or visit the
CTIA Web site at
www.wow-com.comTM



motorola.com

8988485L61-O